



## FAQ – How do I see Assembly Marks in my Model?

Tekla Structures allows you to see Assembly or Part marks (or both) or other options in your model.

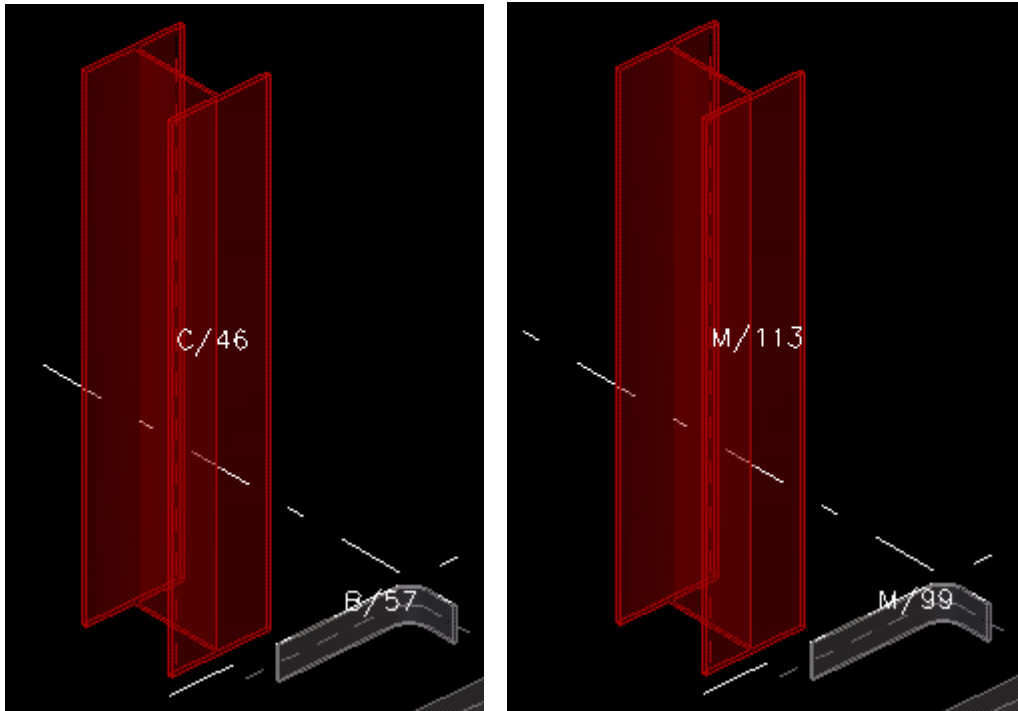

Open the ‘View Properties’ dialog in your model view. Click the [Display...] button and then pick the ‘Advanced’ tab.

Add a tick to the ‘Part label’ checkbox and then choose the Properties you want to be displayed in the model view.

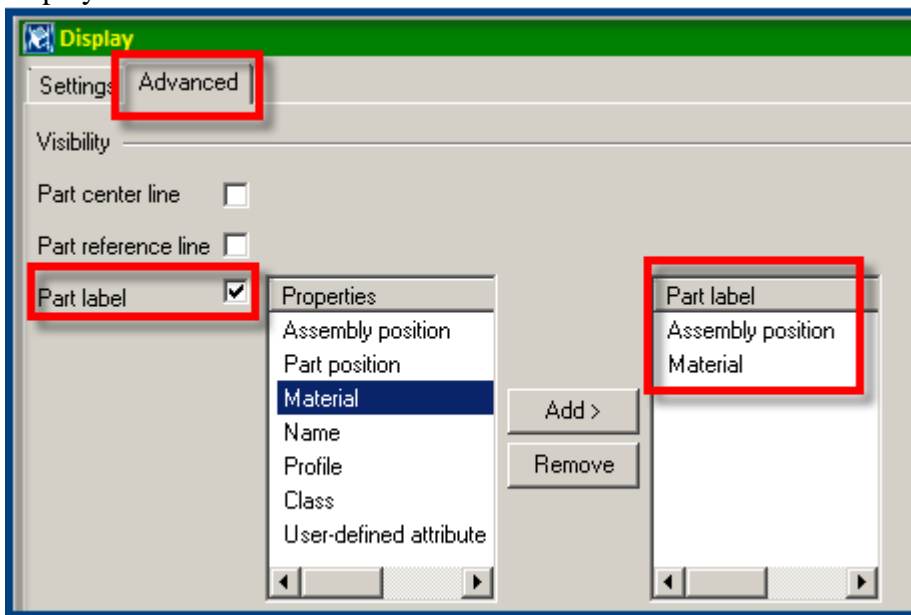

Update the model view by using [Modify] then [OK].