

## FAQ – Where are my report templates in TS16?

The installation folders for Tekla Structures 16 have been changed to account for the different roles which may be used. For the Australasian Steel Detailing role, the steel report templates are now found in the \environment\australasia\steel folder.

With the changes made to Tekla’s installer, the environments folder may now be found in a different location from the usual C:\TeklaStructures\16.0 one.

eg for a NEW installation of TS16 in Windows XP, the \environments folder will by default be located in the C:\Documents and Settings\All Users\Application Data\TeklaStructures\16.0 folder.

eg for a NEW installation of TS16 in Windows Vista (or Windows 7), the \environments folder will by default be located in the C:\ProgramData\Tekla Structures\16.0 folder.

*\*\*\*\*NOTE – By default in Windows Vista and Windows 7 the \ProgramData folder may be hidden. Use Control Panel to set the properties of that folder to ‘Show’.*

eg for an extra installation of TS16 (where a previous Tekla Structures version exists) the \environments folder may still be in the C:\TeklaStructures\16.0 folder.

